


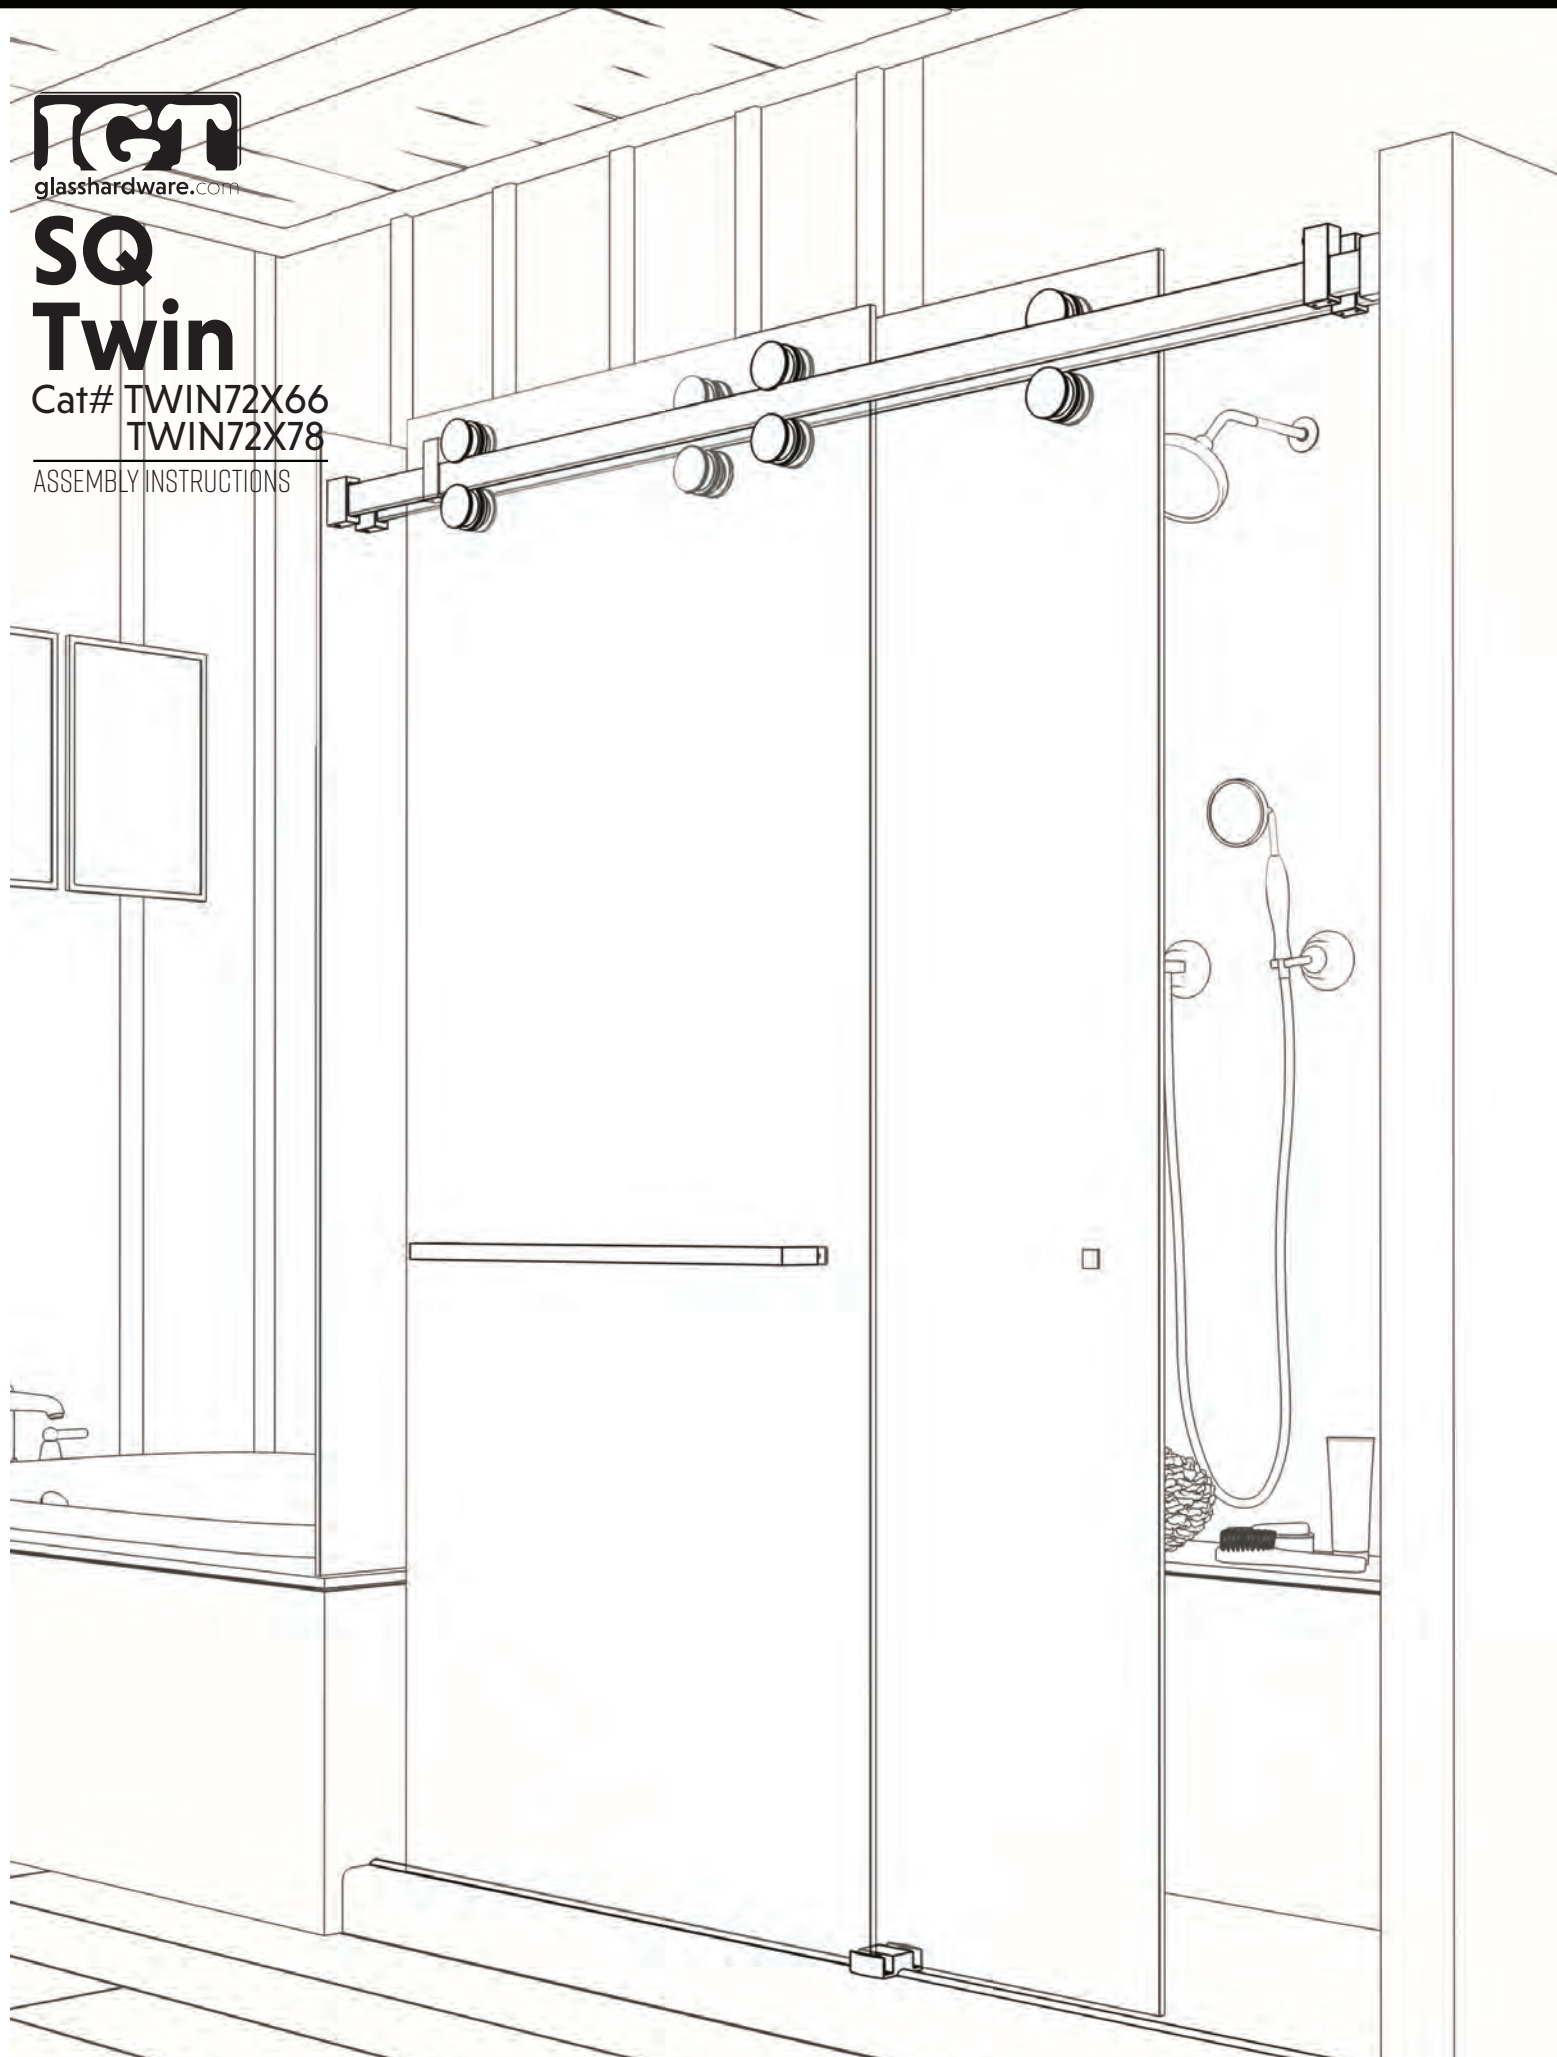


SQ Twin

Cat# TWIN72X66
TWIN72X78


ASSEMBLY INSTRUCTIONS



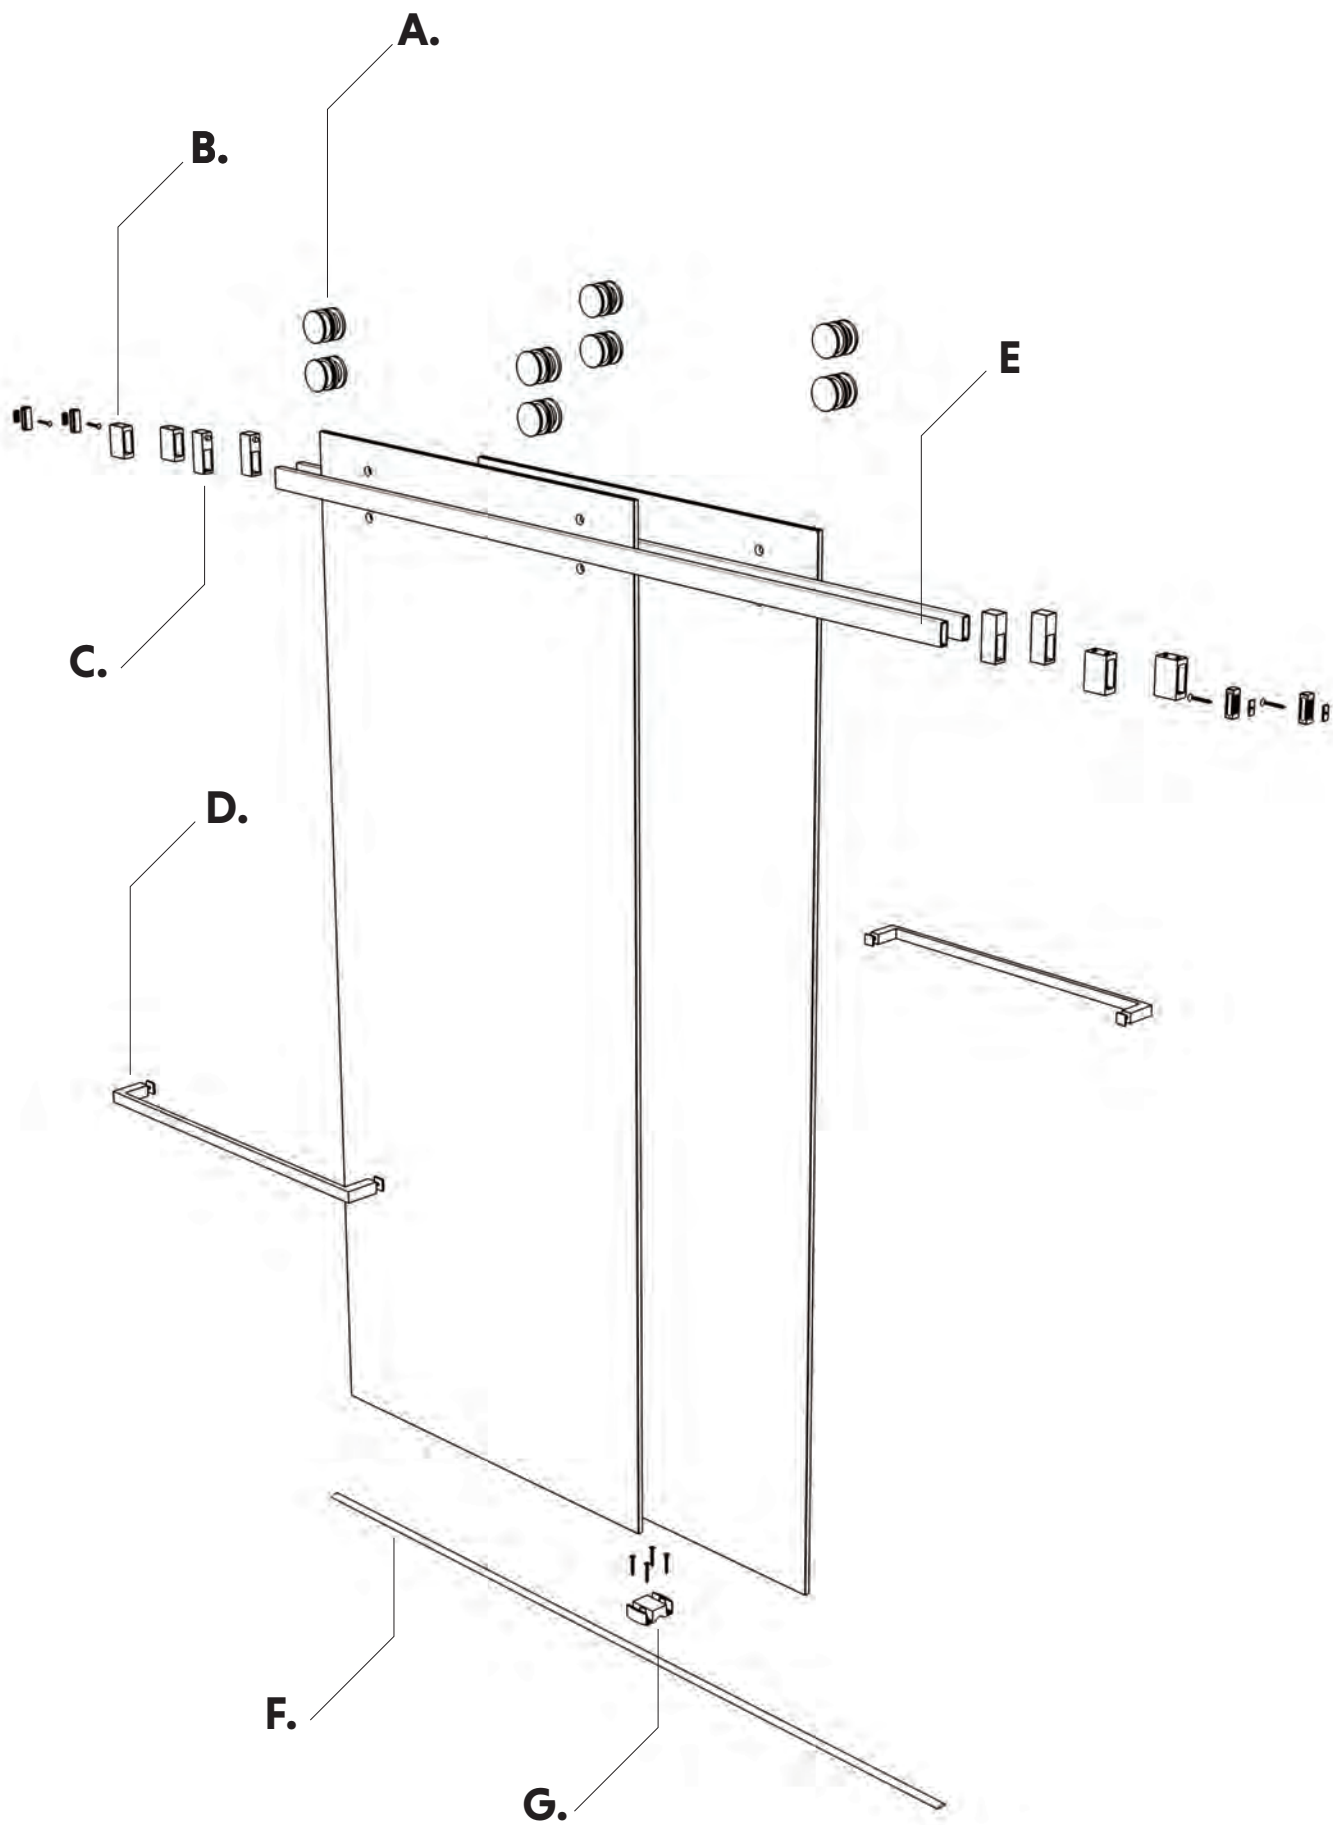


Includes


A.

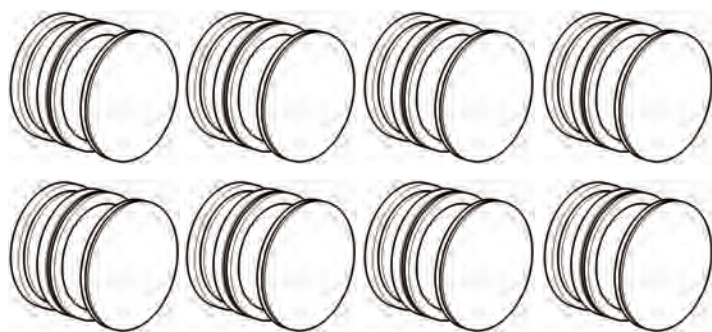


B.

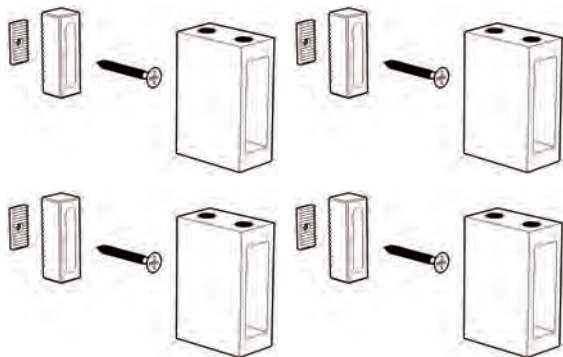


C.

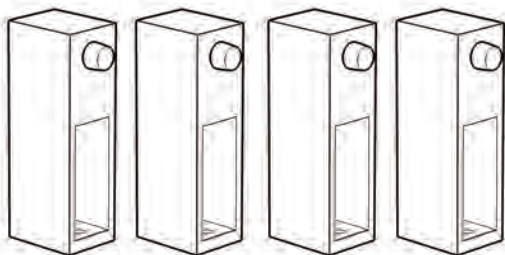


D.

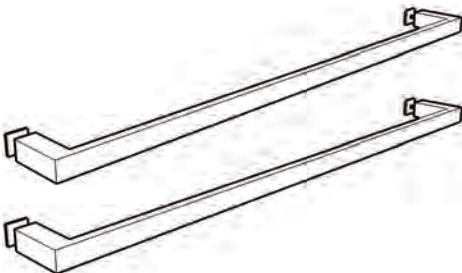

E.


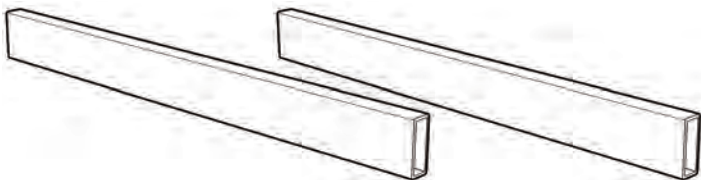


F.

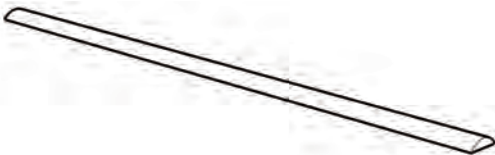

H.

Additional Items.

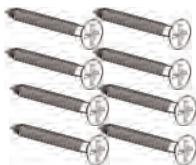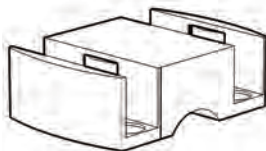

Tools Required

Rubber Mallet




Tape Measure



Spirit Level



Pencil

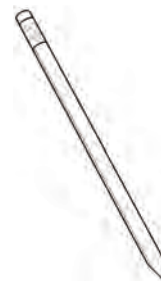

Wood Shims



PVC Shims




Electric Drill



Silirub



Hacksaw

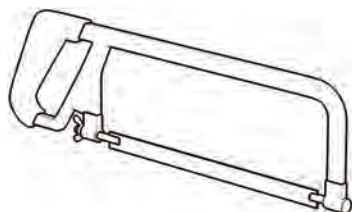

Marker





Paper Towel



Double Side Tape





1.

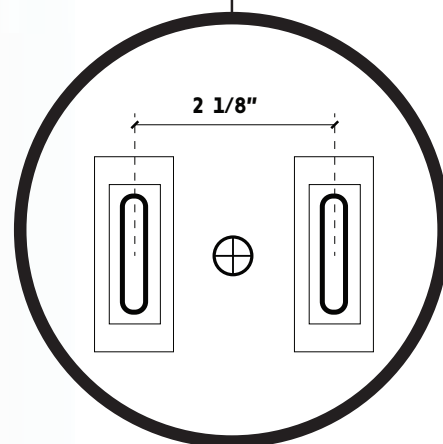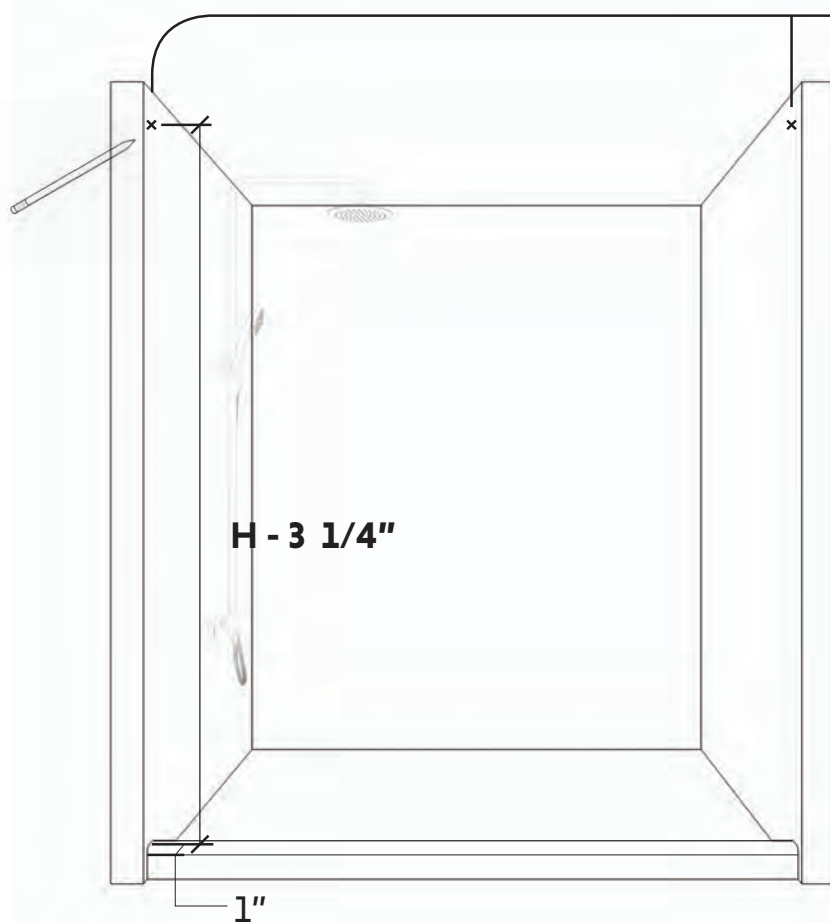


H = Glass Height

2.

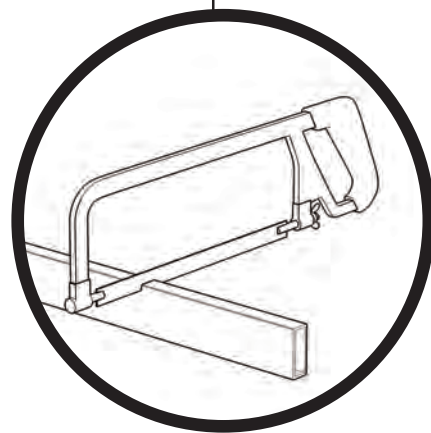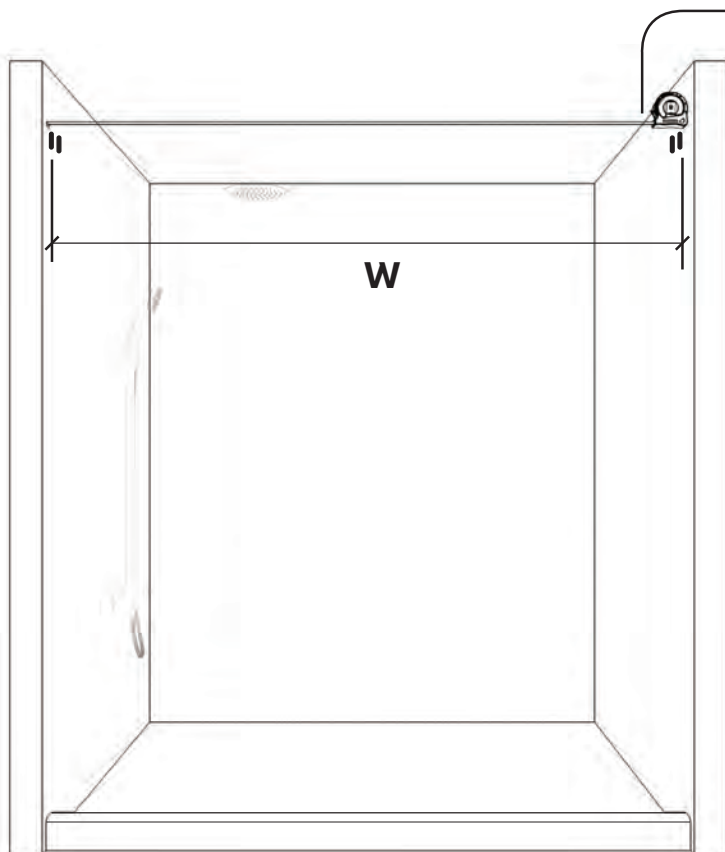


Track length =
W - 1 1/4"


3.

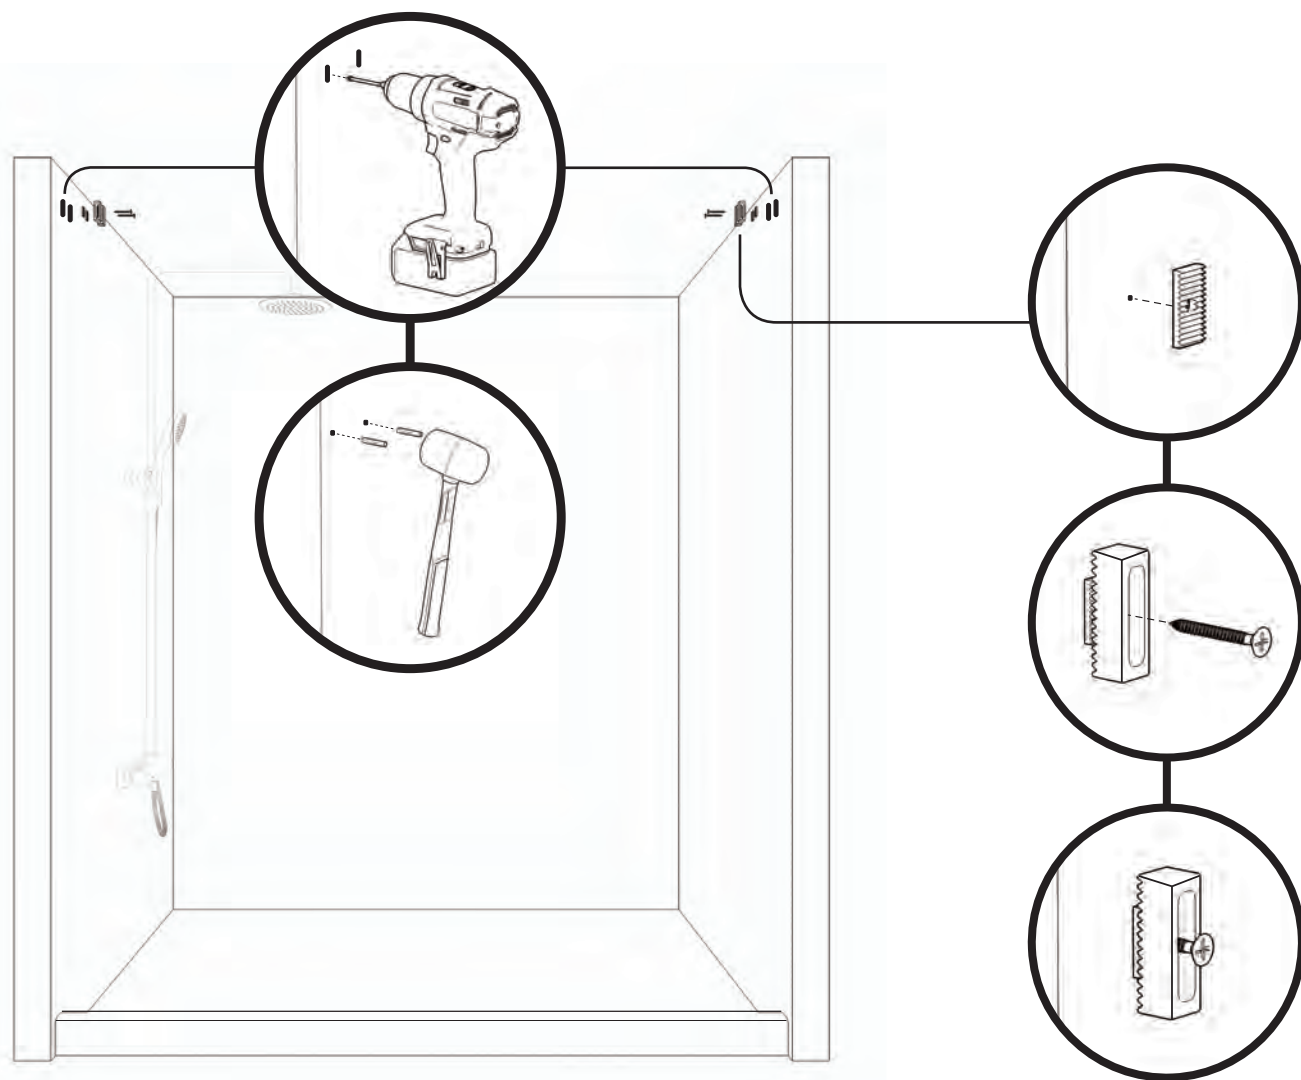


4.

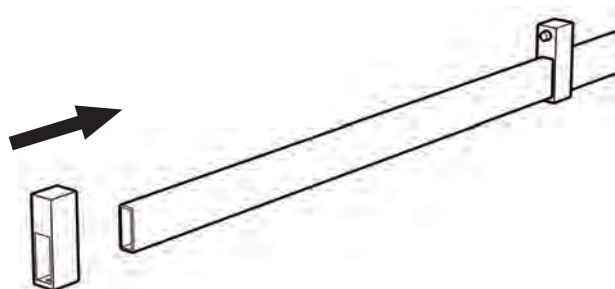


5.

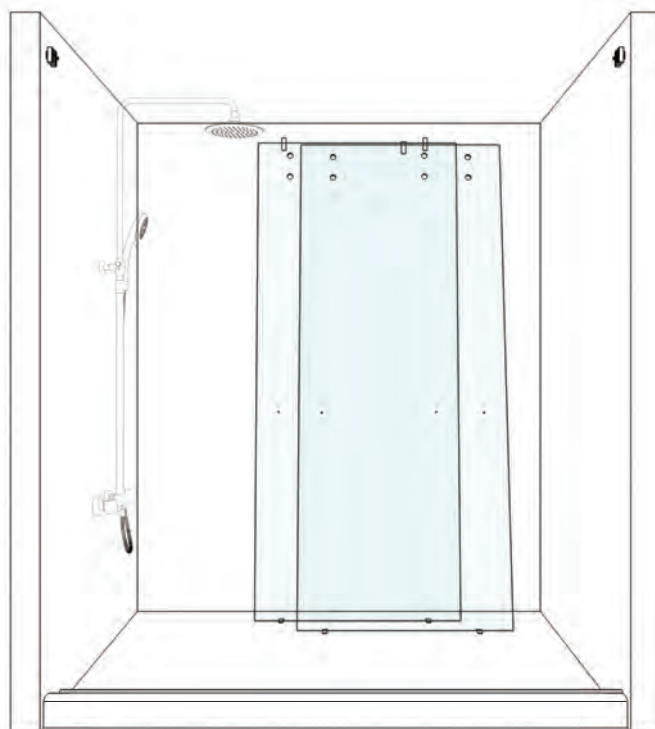


6.

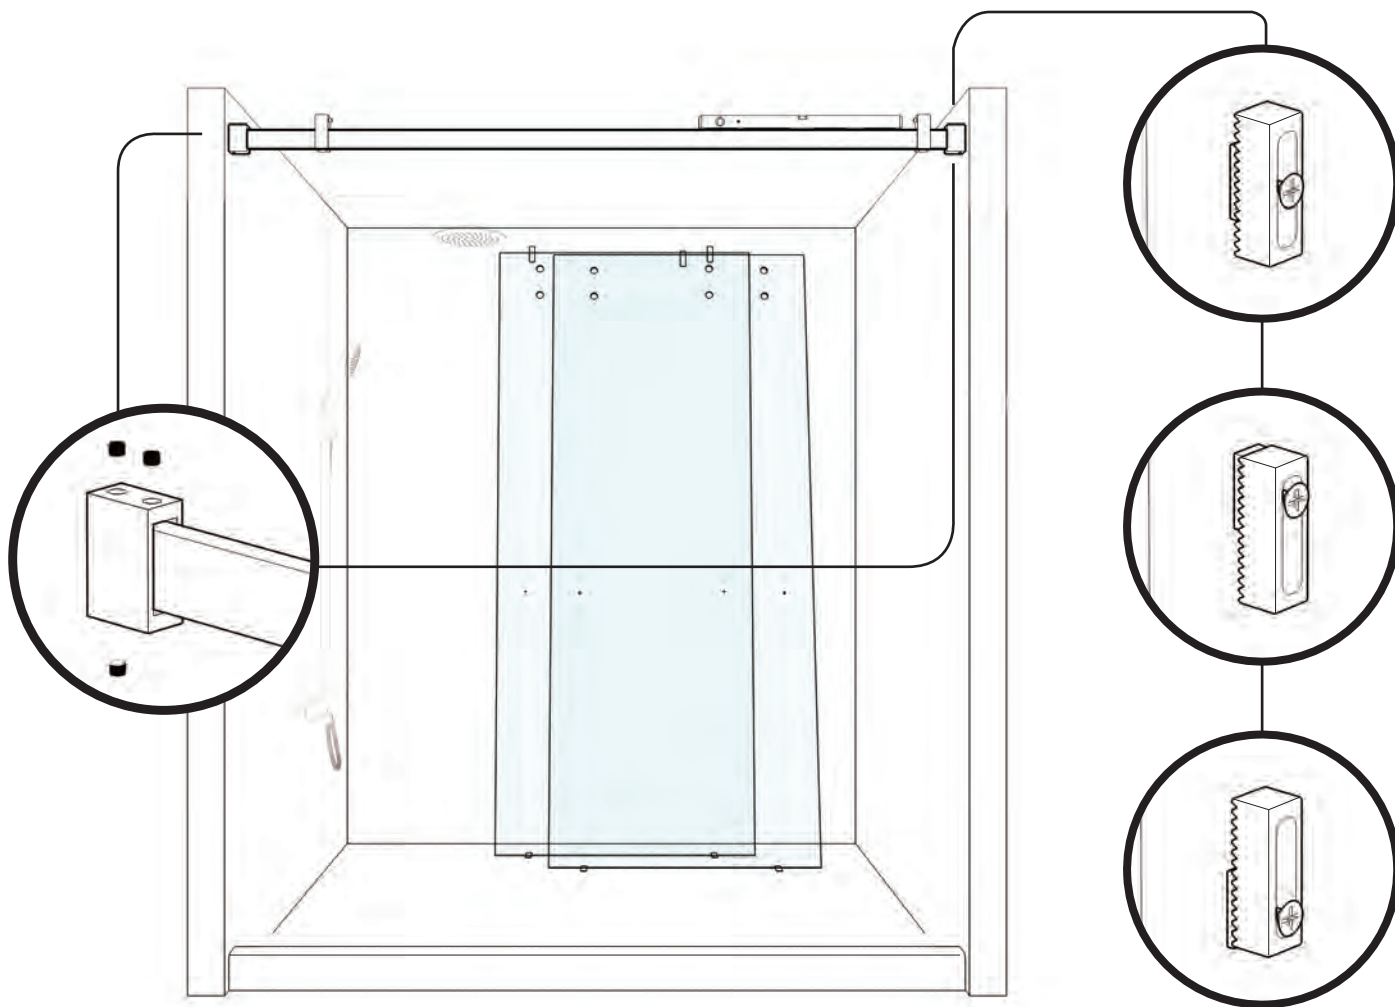


7.

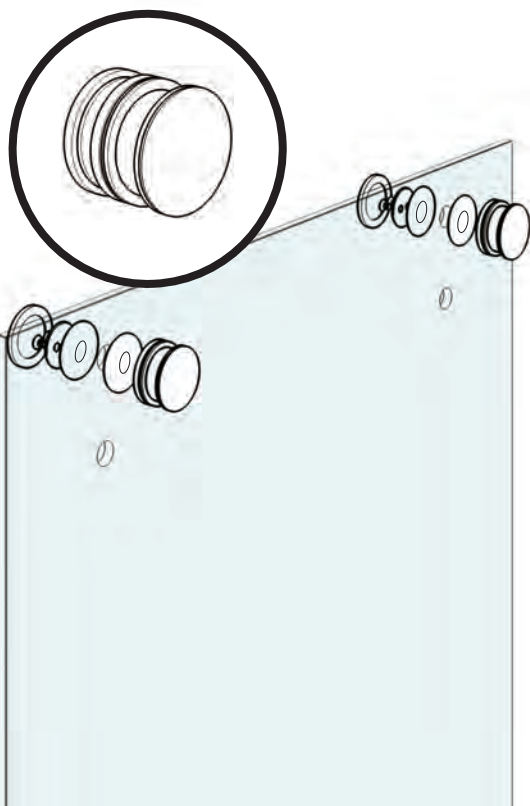


8.

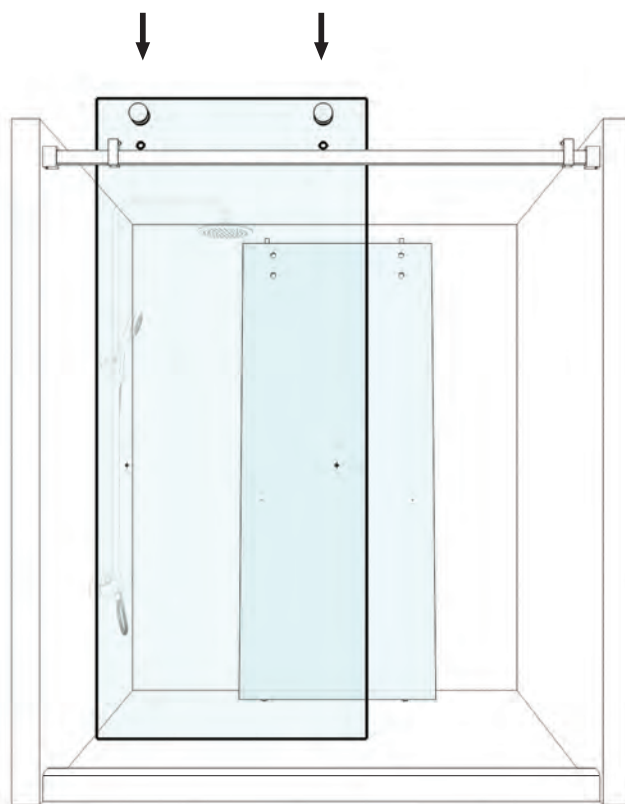

9.

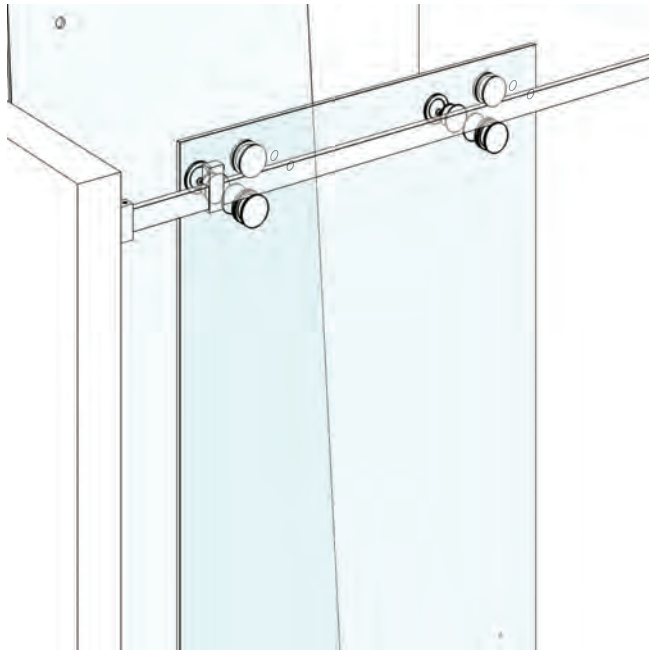


10.

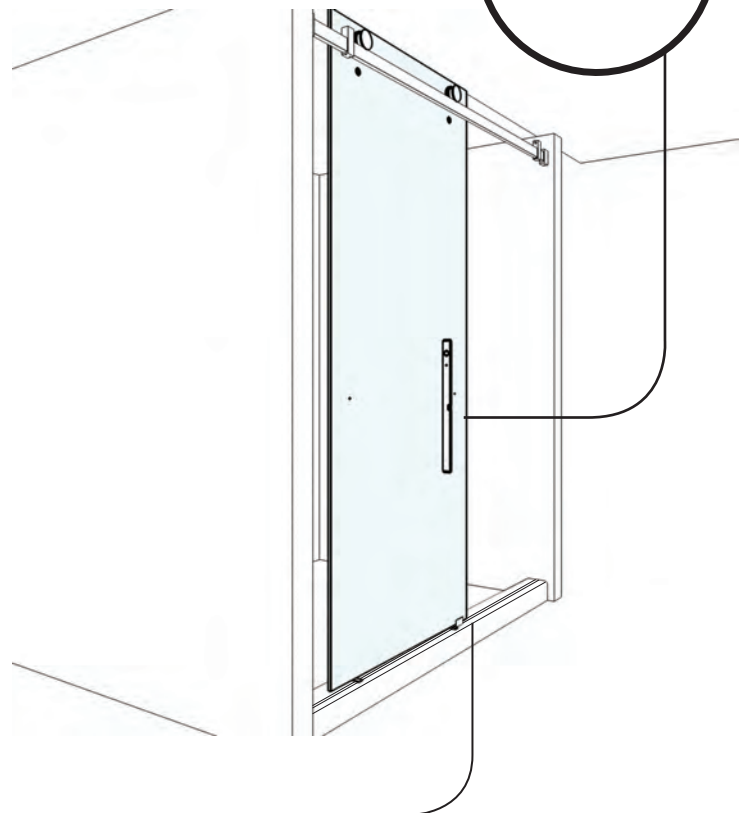


11.


12a.

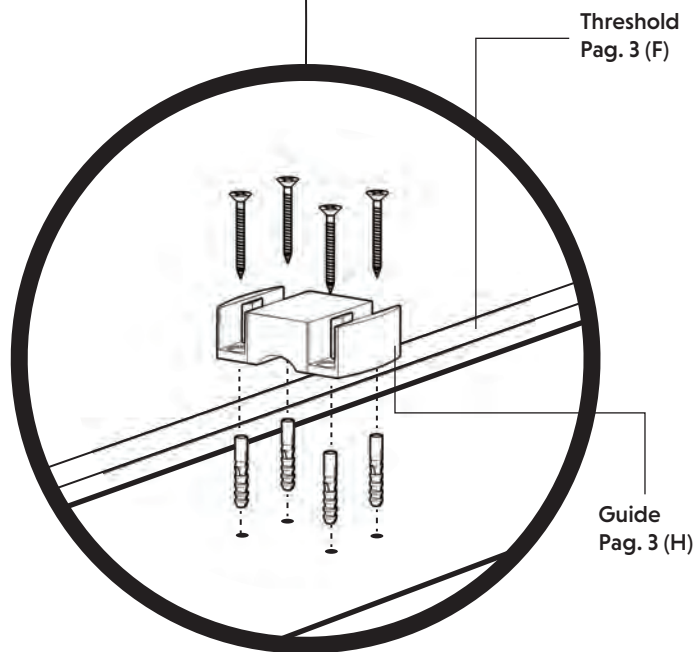


Move to
adjust the
desired
position of the
door.

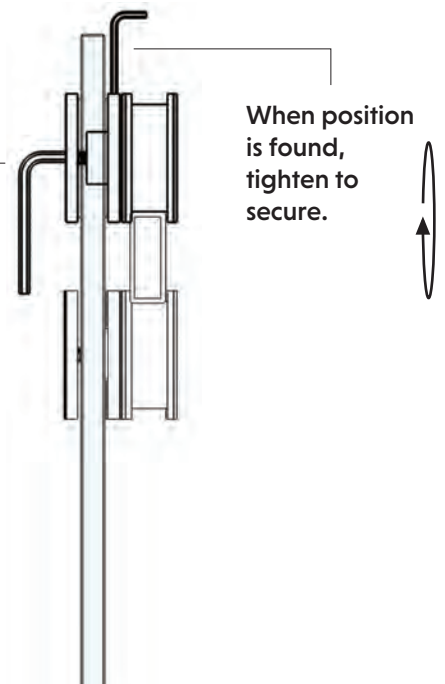


12b.

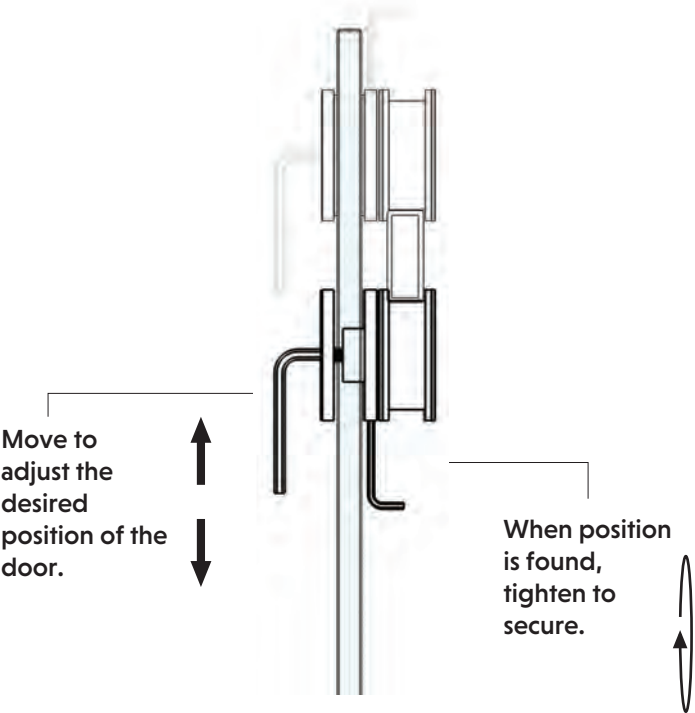


13.

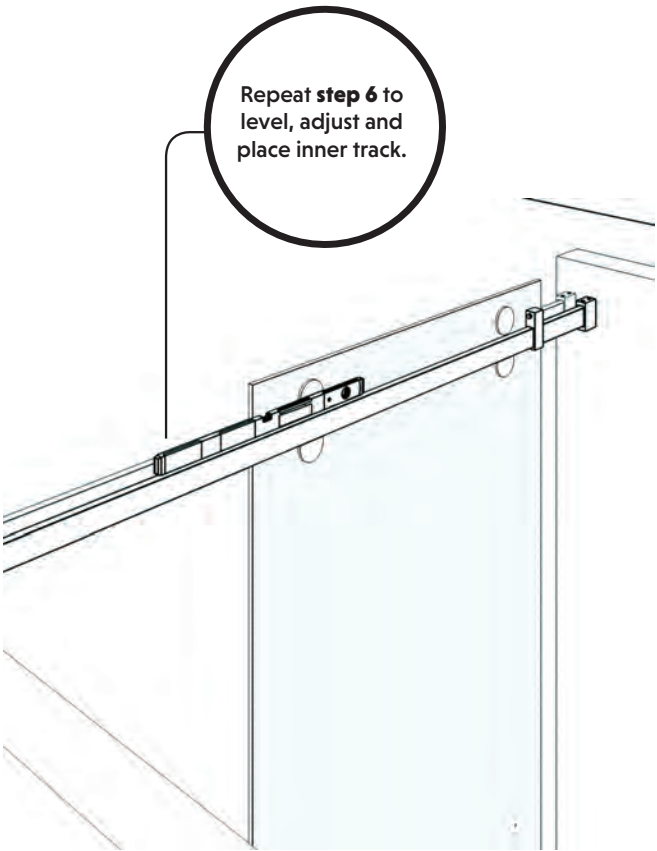


14.

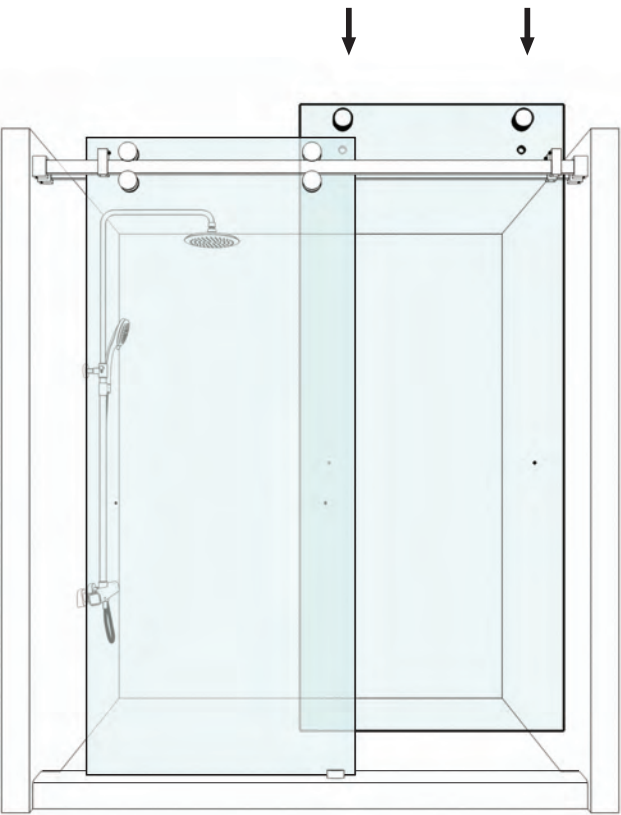

15.

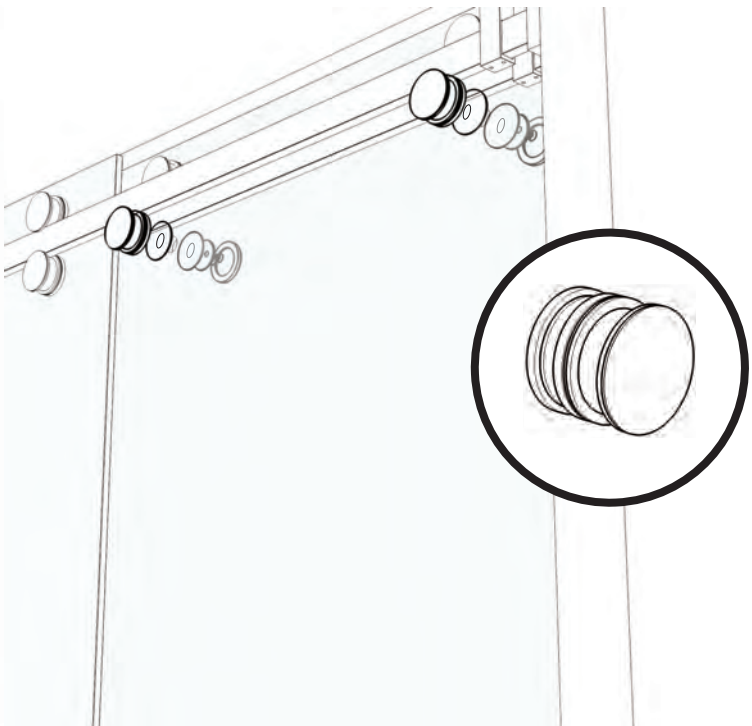

16.

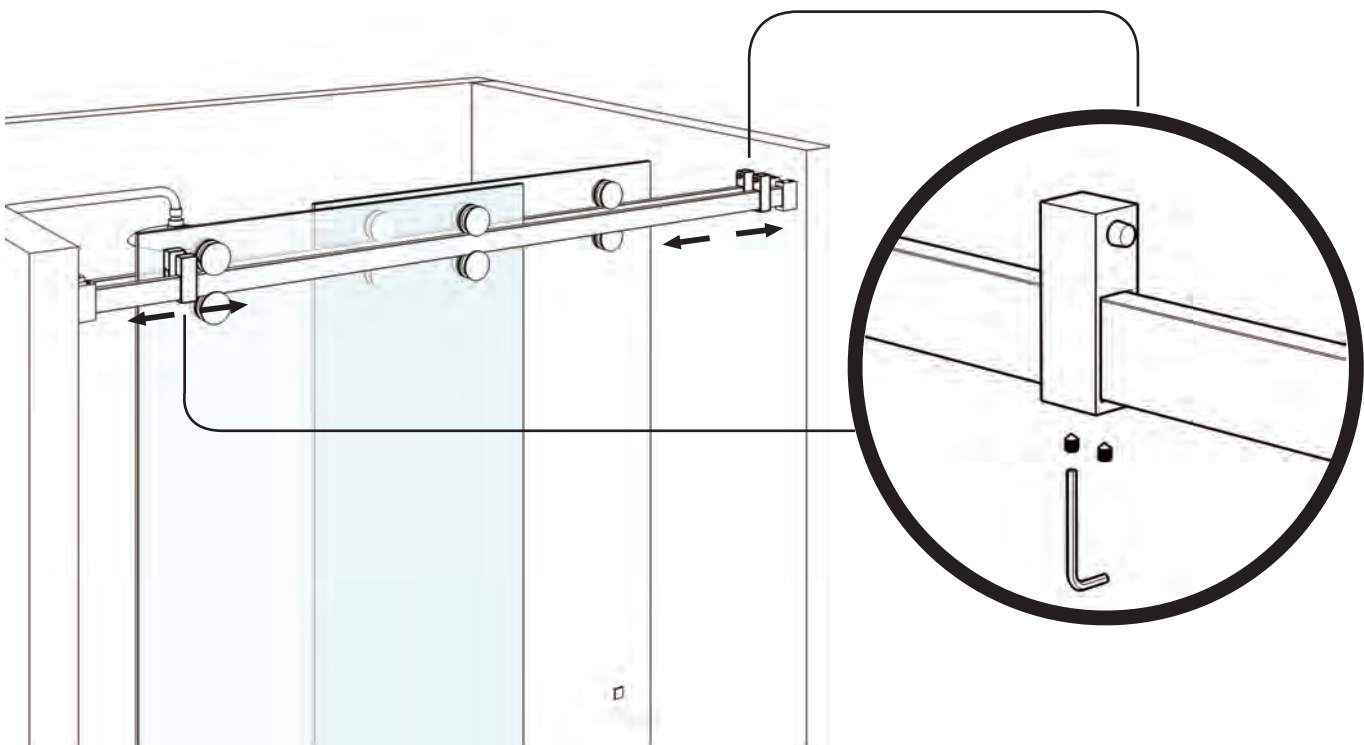

17.



16.

